

SILVA

FULL VERSION MANUAL CITY REAR

Art. No 37575



Thank you for choosing SILVA City Rear bike light. City Rear is designed to meet the demands of today's bicyclists & commuters to ensure visibility in traffic. The rugged and user friendly design makes the SILVA City Rear easy to attach and operate during all weather conditions.

PRODUCT OVERVIEW

City Rear bike light packaging consists of the following parts:

- Lamp unit
- 2 x AAA batteries
- Quick guide

BEFORE USE

INSERT BATTERIES

Before first use the batteries need to be inserted. Open City Rear by taking a firm grip of the red front glass with one hand and press both buttons marked "Open" with your other hand and pull apart the bike light.

Note polarity markings in the battery compartment and insert both batteries. Assemble the rear light by sliding the battery back into the bike light body.

Important: Do not mix batteries of different brands. Do not mix batteries with different level of discharge.

MOUNTING

Mount City Rear preferably on the seat post (Ø 25-32 mm) using the integrated silicone strap. The light should be placed vertically, with power button/indicator facing upwards for optimal performance.

DURING USE

SWITCH ON YOUR BIKE LIGHT

On top of the bike light body there is a push button which controls all light modes.

A short (<1sec) press on the button gives you the following light:

1. Turns City Rear ON in max mode.
2. Switches to Blink mode
3. Turns City Rear OFF

BATTERY STATUS INDICATION

During use, when 15% or less remains of the batteries the power button flashes red.

AFTER USE

MAINTENANCE

To make sure you get maximum performance from your City Rear bike light, clean it regularly with a damp cloth.

If you would like to store your lamp for longer periods (more than 30 days) the batteries shall be removed.

TECHNICAL SPECIFICATIONS

Bike light weight (incl batteries): 55 g

Battery type: 2 x AAA Alkaline

Burn time: Max/Blink: 40 h/

Water resistance: IPX6

Operative temperature range: -20°C - +60°C

Storage temperature: -20°C - +35°C

PROTECT THE ENVIRONMENT.


Bike light and batteries should be recycled and must not be thrown in the regular trash. Dispose these items in accordance with applicable local regulations.

WARRANTY

SILVA warrants that, for a period of two (2) years, your SILVA Product will be substantially free of defects in materials and workmanship under normal use. SILVA's liability under this warranty is limited to repairing or replacing the product. This limited warranty extends only to the original purchaser.

If the Product proves defective during the Warranty Period please contact the original place of purchase. Make sure to have your proof of purchase on hand when returning the product. Returns cannot be processed without the original proof of purchase. This warranty does not apply if the Product has been altered, not been installed, operated, repaired, or maintained in accordance with instructions supplied by SILVA, or has been subjected to abnormal physical or electrical stress, misuse, negligence or accident. Neither does the warranty cover normal wear and tear. SILVA is not responsible for any consequences, direct or indirect, or damage resultant from use of this product. In no event will SILVA's liability exceed the amount paid by you for the product. Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This Warranty is valid and may be processed only in the country of purchase.

For more information please visit www.silva.se

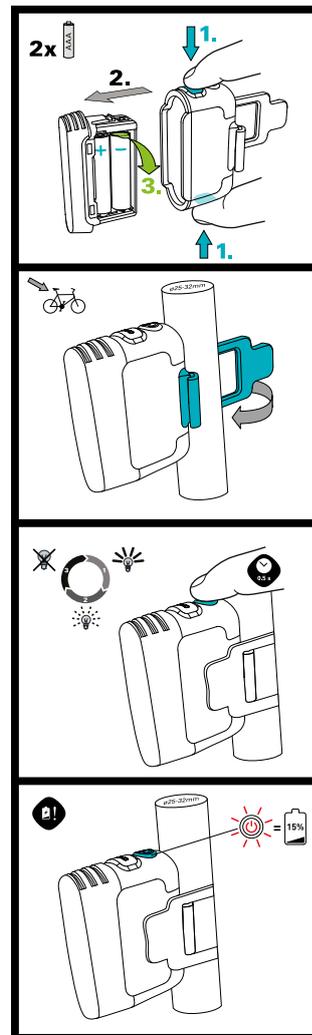

Visit: www.silva.se
for more information about the
Waste Electrical and Electronic
Equipment (WEEE) Directive.